


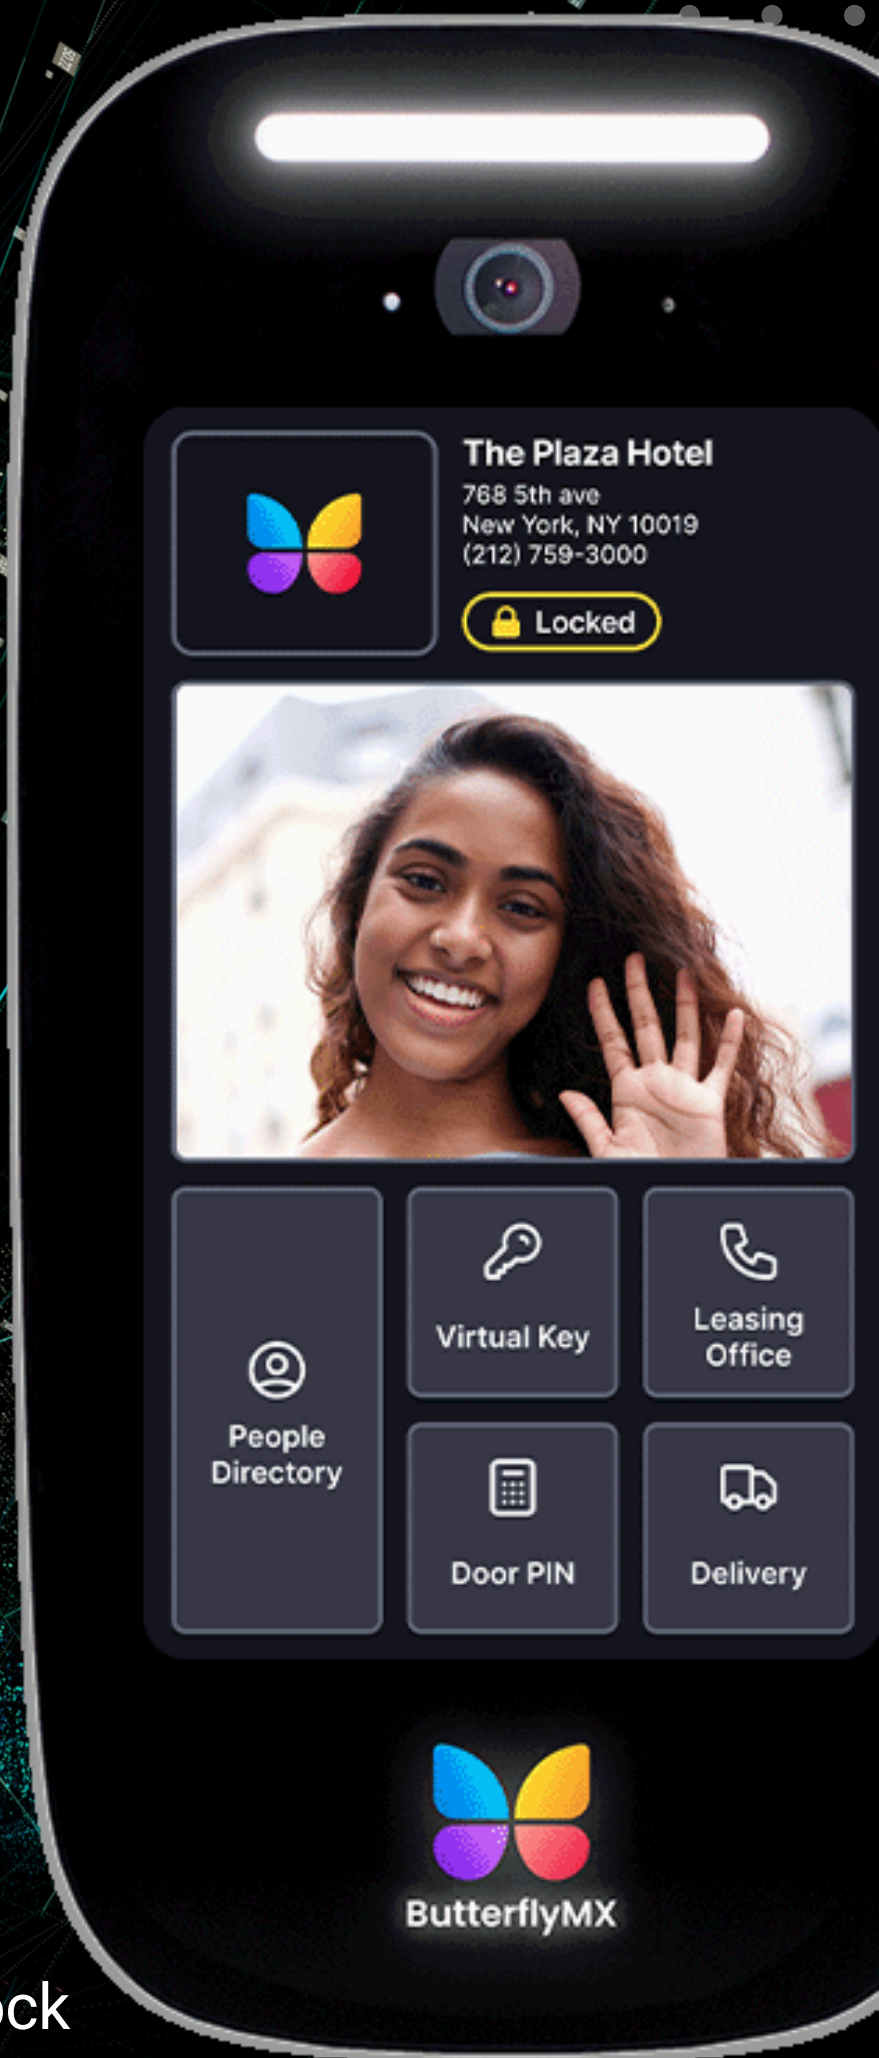

## BUTTERFLYMX INSTALLATION CHECKLIST

FOLLOW THESE QUICK STEPS FOR A PERFECT INSTALLATION

- ✓ Call ButterflyMX for activation
- ✓ Connect power adapter → UPS → power source
- ✓ Test power splice with a multimeter
- ✓ Plug Cat 5e/6/6A cable into router
- ✓ Use network switch if cable > 300 ft
- ✓ Connect to access control or isolation relay
- ✓ Test strike lock unlock
- ✓ Attach backplate/backbox securely
- ✓ Run & connect power, network, and relay cables
- ✓ Mount intercom properly
- ✓ Call ButterflyMX for activation test
- ✓ Confirm video, audio, and door lock function



Need expert installation?

Call MetroCom Security for a free quote: ☎ 866-470-2244

[www.metrocomsecurity.com](http://www.metrocomsecurity.com)